




Basic Cluster

Green Header. This is the connector that the Compensation Board mounts to.

With a pair of pliers you can grab this green plastic header and lift it up off the pins that are soldered into the circuit board. If it doesn't want to lift off too easily, cut the green header into two pieces first. With this green header out of the way you will see 4 pins sticking up out of the circuit Board. Two of the four will need to be jumpered together. See below.

Different year Clusters are slightly different BUT if you use this Gray Ribbon Cable as a reference you will be fine.

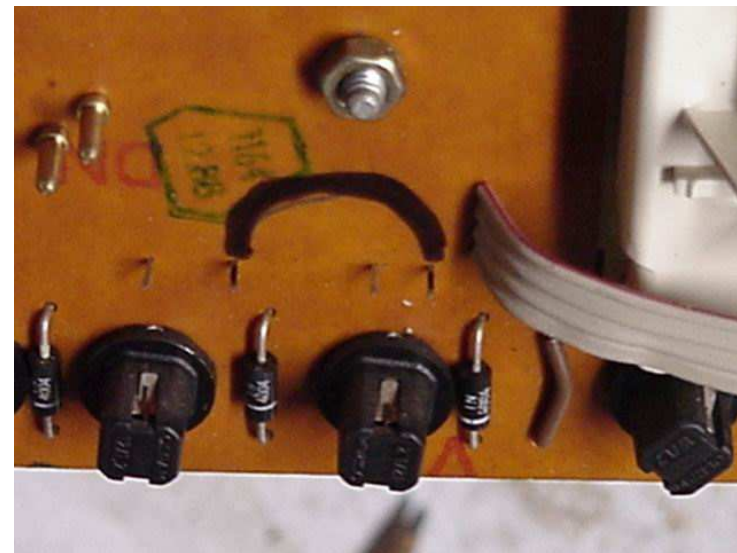

CLOSE UP OF 4 PINS..Marked for jumper

Solder a small wire from the Pin closest to the Gray cable , skip over the next pin then solder to the third pin. That's all there is to it.

OH you Must open up the cluster and take out the Compensation board or you will have problems.